



# Touch Smart Portable Monitor

LD32FH8183MT



## Table of Contents

---

Safety Precautions	2
In The Box	6
Product Overview	7
Remote Control	8
Battery	9
Assembly Instructions	10
Angle Adjustment	16
Powering On Your Device	17
Connections	18
Screen Mirroring	19
Troubleshooting	21
Specifications	22
Need Help?	23
Warranty Information	24

## Safety Precautions

---

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ IT CAREFULLY AND KEEP FOR FUTURE REFERENCE.

- To avoid potential fire hazards, refrain from storing the Product in the locations listed below. Doing so could result in fire hazards, electric shock, combustion/explosion, malfunction, or damage to the Product:
  - Prolonged exposure to direct sunlight.
  - High-humidity environments, such as bathrooms.
  - Proximity to heat sources, such as stoves or other heaters.
  - Contact with steam or oily fumes, such as kitchens or humidifiers.
  - Exposure to rainwater or moisture.
  - Placement near inflammable substances, such as gasoline or candles.
  - Areas prone to dust accumulation.
  - Unstable or high places, such as shelves or desks.

Place the Product in a well-ventilated space to prevent overheating. Avoid placing it in a narrow space that can restrict the flow of air.

- Never cover the Product with materials such as clothes or blankets. This can restrict airflow and cause the device to overheat, posing a risk of fire.
- After prolonged use, the Product' s ventilation port may become hot. Avoid touching the ventilation port to prevent burns or other injuries.
- To avoid product damage and potential electric leakage, protect the power cables from twisting, bending, and cutting. If the power cables are damaged, do not use the device and seek professional assistance.
- When connecting the power cable, make sure the power interface is securely and correctly connected to the device. A loose or poor connection can not only damage the product, but also pose a risk of electric shock. Do not move the Product while connecting the power cable to avoid any accidents.
- Do not remove the Product' s power cable by force.
- Be sure to handle with caution when connecting to/removing the power cable from the power source.

## Safety Precautions

---

- To avoid fire hazards or electric shock, do not connect too many devices on one singular power supply source.
- Follow all installation instructions to avoid damage or injury due to improper assembly.
- Position the Product in a secure area to prevent damage or personal injury.
- Please connect the Product's adapter to a three-pole grounded AC socket. Make sure to connect the grounding wire to avoid electric shock.
- In case of lightning, do not touch the Product. Electric shock may occur.
- Do not drop metals into the Product. If foreign matters fall into the Product, please remove the power cable and contact Customer Service.
- In any of the following cases, please cut off the Product's power supply and contact Customer Service.
  - The Product is damaged.
  - Water or other foreign matter enters the Product.
  - The Product has smoke or other odor.
- Do not use high-voltage electronic equipment around the Product; otherwise, it may lead to faults such as signal interference.
- Make sure to use authorized parts and components; otherwise fire hazard, electric shock or malfunction may occur.
- Do not try to modify the Product; otherwise, fire hazard or electric shock may occur. Please contact Customer Service or authorized repair personnel to receive service or maintenance.
- Do not dismantle the AC adapter or power cable; otherwise, fire hazard or electric shock may occur.
- Do not drop or hit the Product.
- To reduce fire hazards or electric shock, do not touch the Product with wet hands.
- Wipe off water or dust (if any) on the power plug.

## Safety Precautions

---

- Do not apply unreasonable pressure or use sharp objects to press the Product' s screen; otherwise, product damage and personal injury may occur.
- While cleaning the Product, please remove the power cable and wipe it gently with a dry cotton cloth.
- Do not spray water or other liquids directly onto the Product.
- Do not clean your product with harmful chemicals, such as glass cleaner, air freshener, insecticide, lubricant, automotive or industrial wax, polishing agent, diluent, benzene or alcohol; otherwise, electric shock or product damage may occur.
- For any battery liquid leakage in the Base, stop use immediately to avoid skin and eye contact. Any accidental contact may lead to blindness or burns. Flush the contacted area with water immediately and contact a medical professional for further assistance.
- The battery may fail to recharge completely or have a reduced life if it is discharged completely or idled for a long period of time.
- Any unauthorized disassembly/assembly of product parts without consulting the manufacturer may lead to product failure, and you will not be entitled to maintenance services.
- Do not push or kick the Product.
- Do not suspend or put heavy objects on the Product.
- Do not move or slide the Product while sitting on its Base.
- Do not exceed the Product' s limit angle by force.


### SAFETY WARNING (**Stability Hazards**)

Serious personal injury may occur due to display instability. The following preventive work is recommended to avoid injury:

- Be sure to use the suggested stand and mounting methods.
- Be sure to put the Product on level ground.
- Warn children about the hazards of climbing on or touching the display or stand.
- Make sure to arrange the Product' s power wires and cables neatly to avoid tripping or dragging.
- Do not put the Product at a high or tilted place.
- Do not place articles such as toys, on the Product or stand, as this may induce children to climb onto the Product.

## In the Box


---

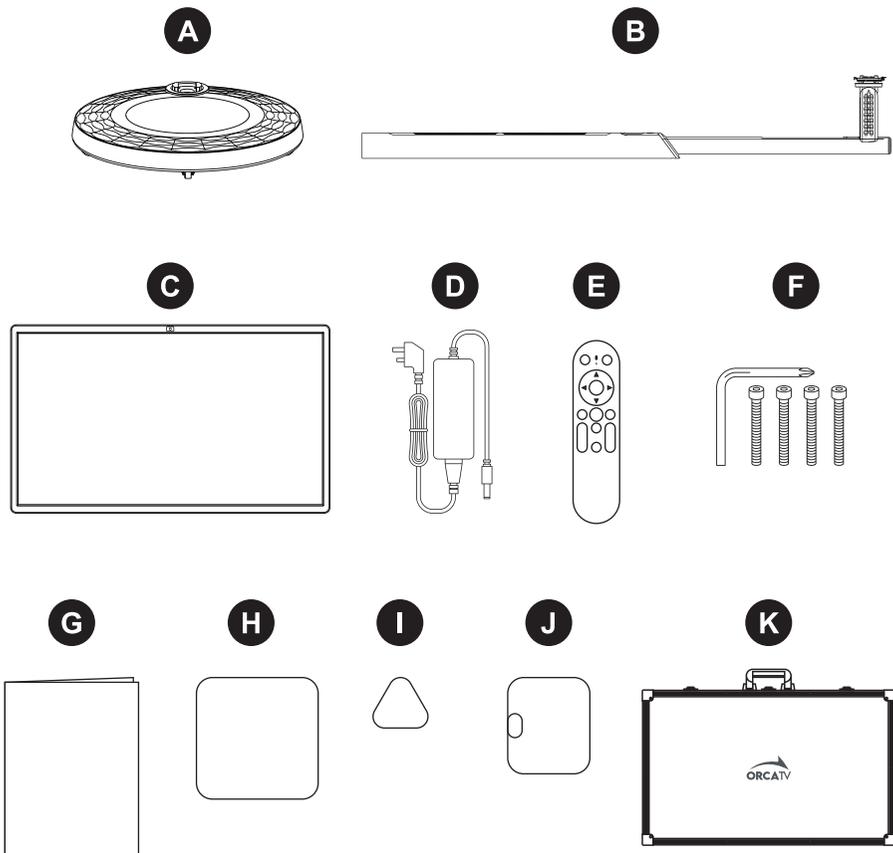

- A. Base
- B. Stand
- C. Monitor
- D. Power Adapter
- E. Remote Control
- F. Hex Wrench, (4) Hex Screws
- G. User Manual
- H. Warranty Card
- I. Pry Tool
- J. Bottom Cover
- K. Carrying Case

# Product Overview

---

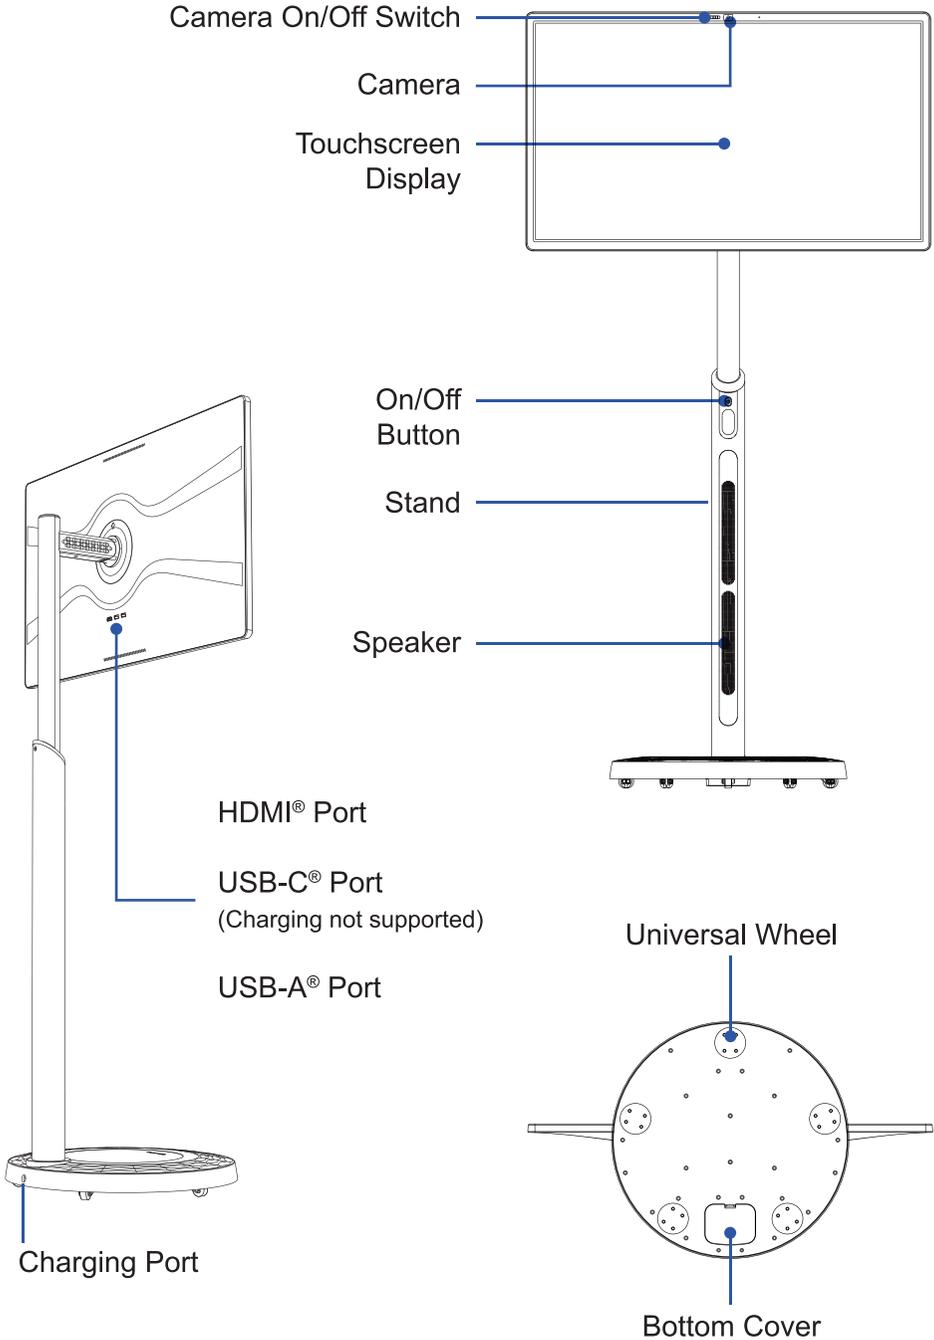

## Remote Control


---

### Bluetooth® Pairing Instructions

Device Name: Display

To connect the remote control via Bluetooth®, press and hold the Home button and the Back button simultaneously. 🏠 + ↶

When the indicator light blinks slowly, the remote is in pairing mode. If pairing is successful, the indicator light will blink four times.

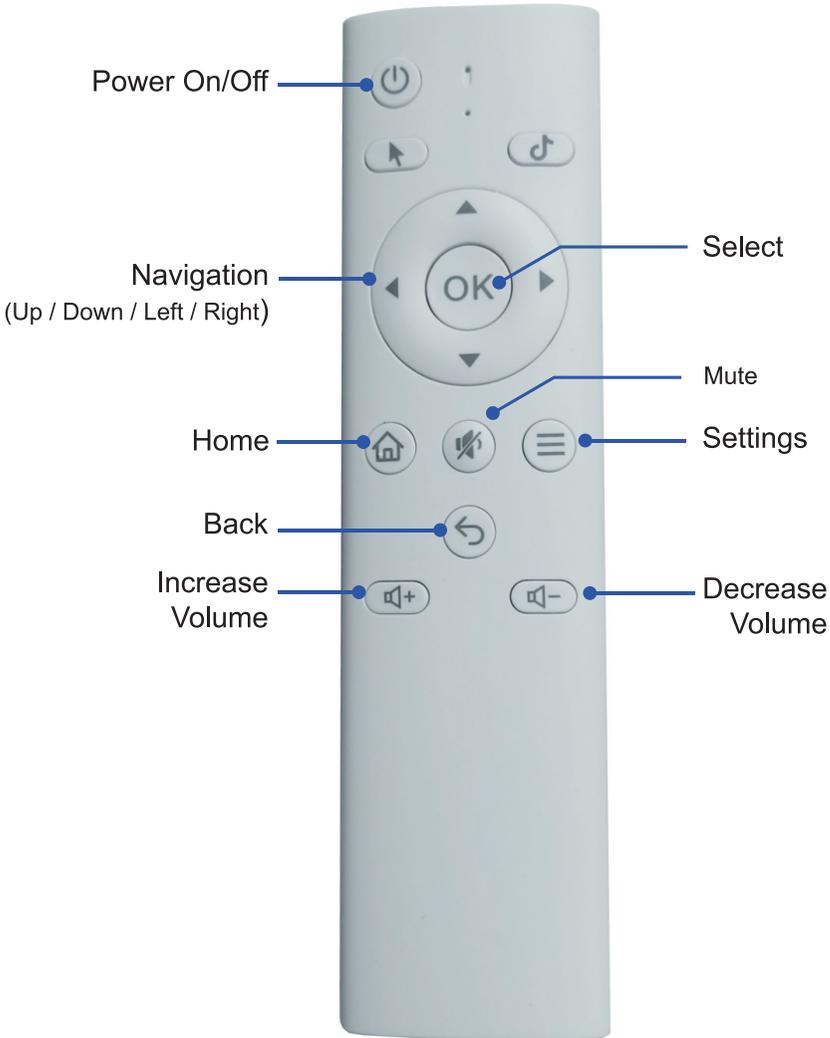

Note: Remote Control requires two (2) AAA batteries (included).

## Battery

---

The product's movable Base is fitted with a built-in battery to ensure operation for periods of time without a connection to a power supply.

### NOTE:

- The power supply indicator serves the singular function of indicating the status of the external power supply. A luminous green indicator denotes the successful connection of the external power supply, while a lack of illumination signifies its disconnection.
- The built-in battery can be fully recharged within approx. 7 hours.
- The product's battery life will decrease with time and usage.
- The product's battery may encounter charging failures when temperatures are below 32°F.
- To optimize battery longevity, it is recommended to use the battery for some time before recharging, rather than constantly keeping the battery full.
- Keep the battery's power level at 50% to prolong its service life.
- Note: The actual use period may vary along with use conditions, habits and different factors, such as connected devices, ambient temperature and product settings.

### WARNING:


Using the wrong battery can be dangerous and may cause an explosion. Be sure to handle the battery with caution. Users should not attempt to dismantle and replace the battery on their own.

- The battery shall not be disassembled, dropped or thrown into fire.
- If there is severe swelling, do not continue to use it.
- Do not place it in a high temperature environment.
- Do not use the battery if immersed in water.


## Assembly Instructions

---

1. Remove the Base **A** and the Stand **B** from the case, align the hole at the front of the Base with the Lower Stand, then insert the Stand into the hole. Make sure to fasten the connection.

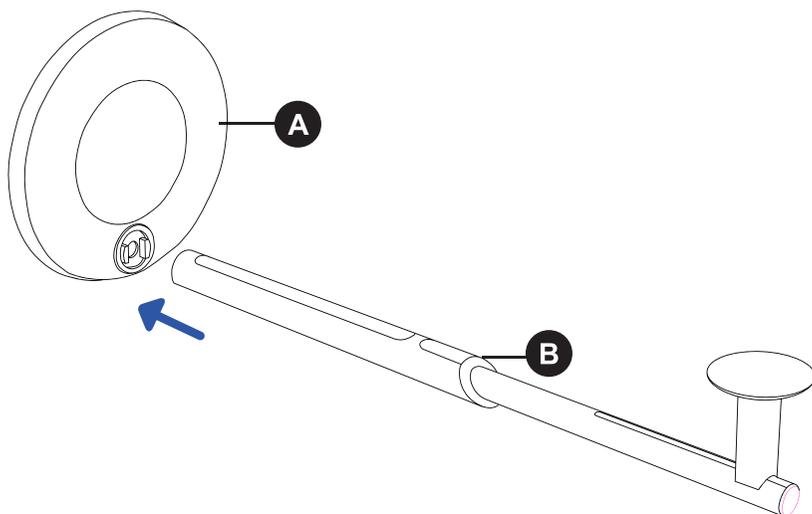



2. Using the hex wrench and four hexagon screws **F**, rotate the four screws clockwise at the bottom of mobile Base to fasten them.

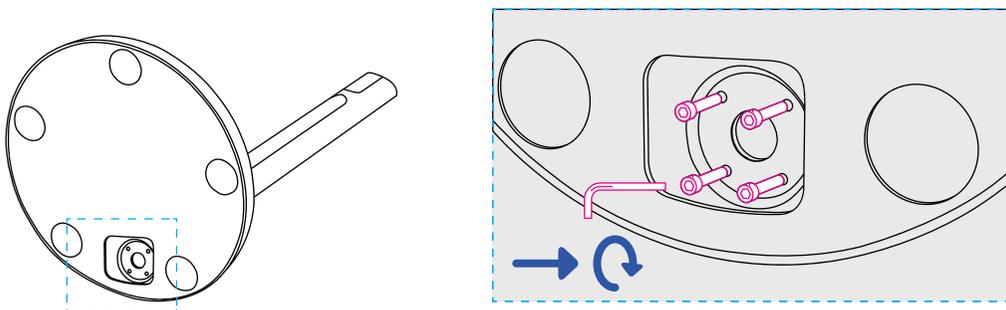


## Assembly Instructions

---

3. You will now see two pairs of wires that need to be connected. Connect the matching wire clips together (i.e. connect red to red and blue to blue). Ensure each connected pair is fully snapped together and securely attached.

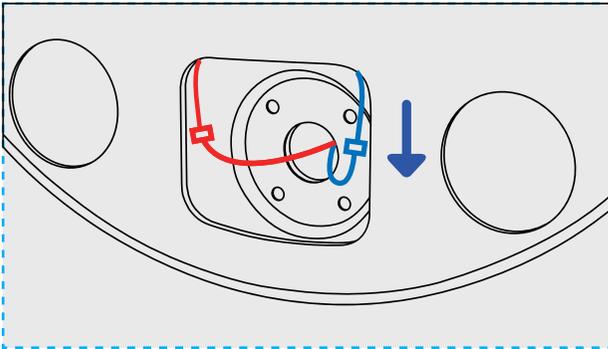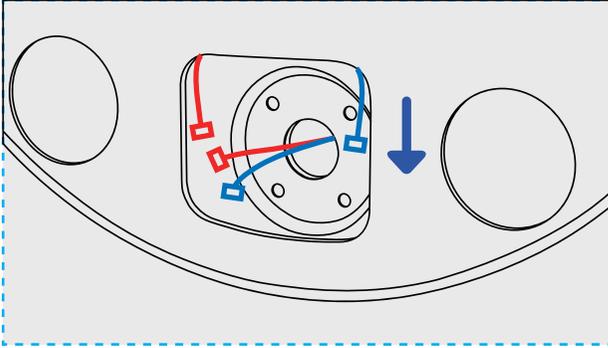





4. Install the **J** Bottom Cover as indicated below.

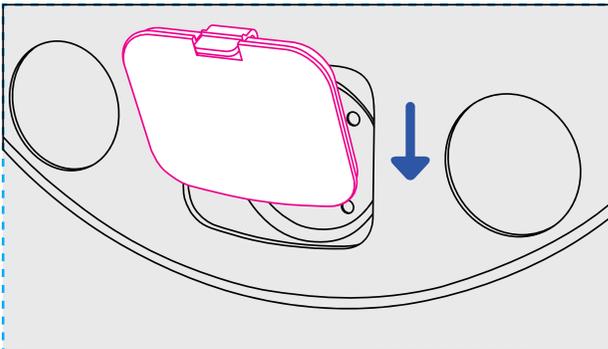

## Assembly Instructions

---

5. Keep the installed stand in an upright position on a level surface. Locate the positioning column as shown below. Remove the Monitor from the box, and locate the mounting holes on the back of the Monitor.

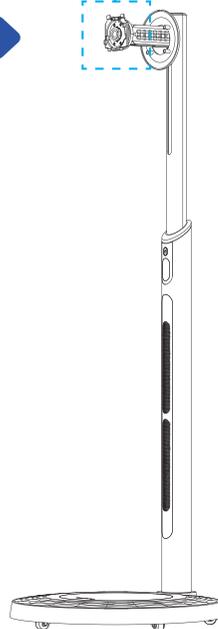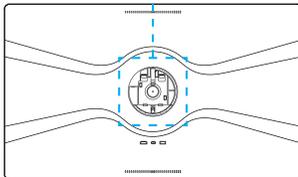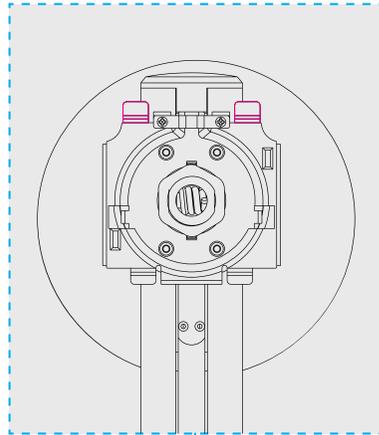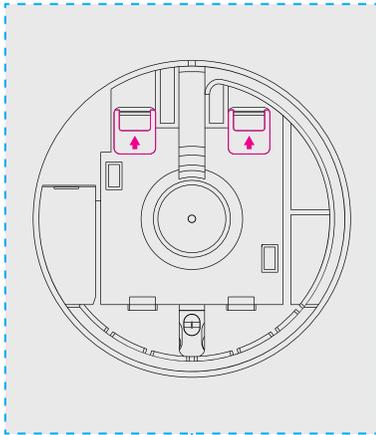


## Assembly Instructions

---

6. Using both hands, hold the Monitor with the touchscreen display facing you. Align the mounting holes with the positioning column, taking extra care to ensure they are properly lined up.



Release slowly. You should hear a “click” , indicating that the display is locked in place.

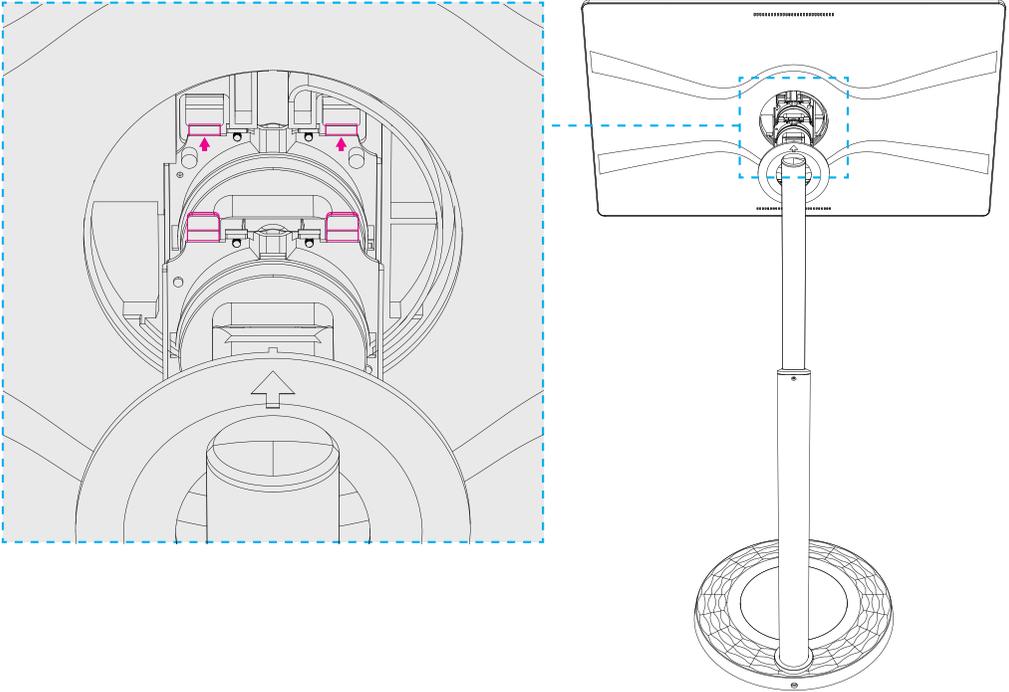

### Note:

The camera should be at the top of the display. Do not flip.

7. Insert the stand's power cable clockwise into the power interface at the back of the Monitor.

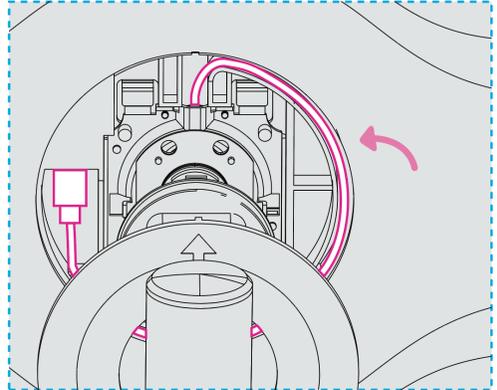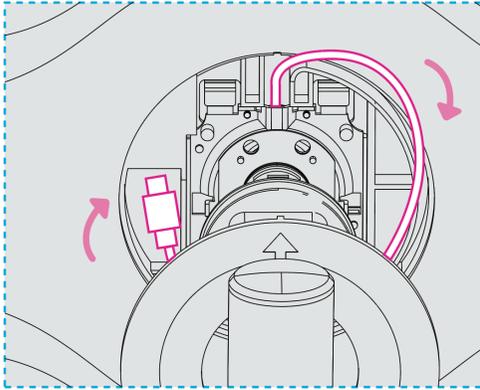


Cross the cable over the top and insert it into the power interface at the back of the display.

Fix the cable into the cable groove.


### Note:

- Connect the cable correctly and firmly here, to avoid product damage and personal injury due to poor power supply contact.
- Once the cable is connected, press the "ON/OFF" button on the lifting rod to power on the Product.
- If startup fails, please check that the cable is properly connected, or try to reconnect the Power Adapter on the Base.


8. Install the Monitor Cover following the steps below:

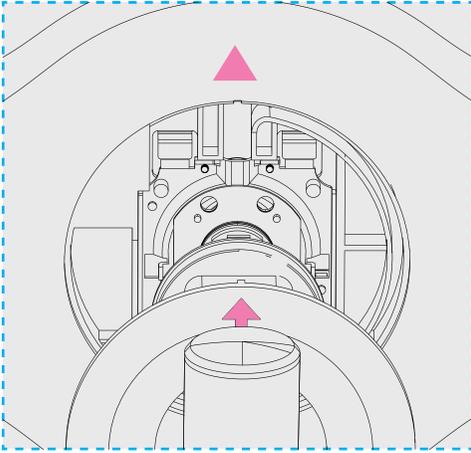

Find the triangle indication mark at the back of Monitor.

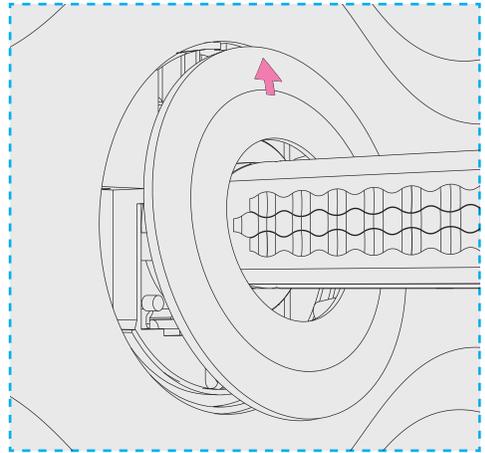

Find the triangle indication mark on the cover.

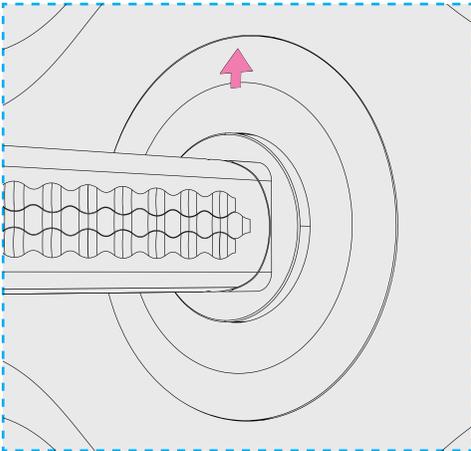

Align the two indicator marks and position to fasten the monitor cover to the Monitor.

**Note:**

To remove the monitor cover, locate the slot and use a flathead screwdriver to lift it. Do this carefully to avoid product damage or personal injury.


## Angle Adjustment

---


You may adjust the angle and height of the display for the optimal viewing experience in any scenario.

- Supports 180° rotation (left rotation: 90°; right rotation: 90°).
- Supports tilt adjustment of 45° (+25°/-20°) and height adjustment up to 7 inches.

NOTE: The actual angle may vary slightly due to the external factors.

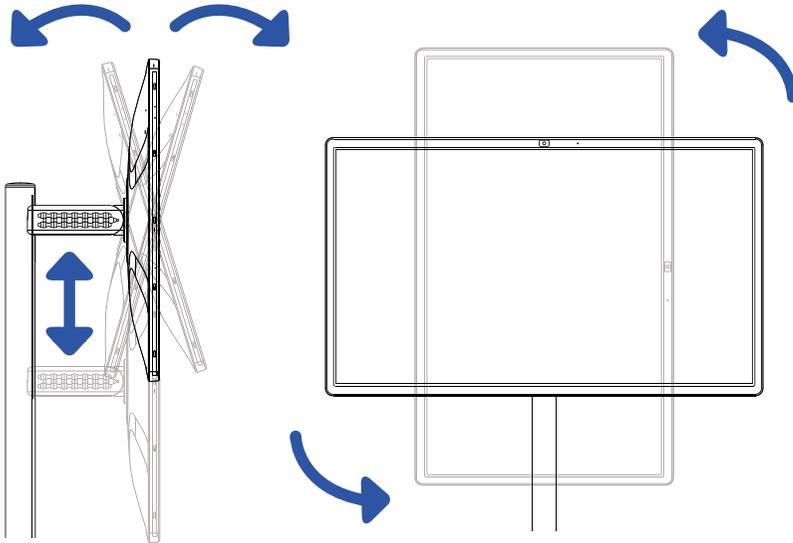

1. Insert the Power Adapter into the charging port, and once connected, refrain from unplugging it. Upon powering on the device, the indicator light on the product's stand will flicker, meaning that the base is turning on.
2. During initial use, it is important to correctly connect the Power Adapter to facilitate optimal operation.
3. To power on the product, press and hold the ON/OFF button on the stand for 3 seconds.

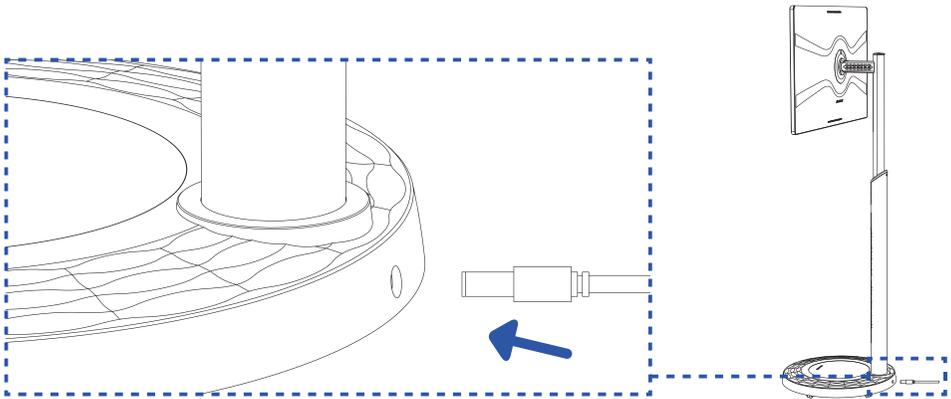


### **NOTE:**

- To avoid product damage and personal injury, keep the device in a vertical position at all times, refraining from laying it flat.
- Keep hands clear of the base.
- When moving the product, hold the middle section of the stand securely. This prevents product damage and reduces the risk of personal injury due to tilting.
- If foreign matter gets stuck on the stand or base, gently remove them using a clean, damp paper towel or cloth.

## Connections


---

This TV can be connected to other devices through HDMI®, USB-C®, and USB-A® cables.

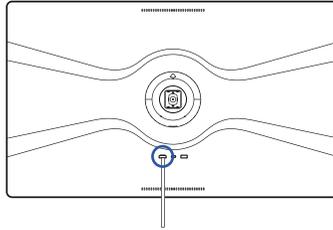


**HDMI®**

You may connect a laptop to the display via HDMI® cable to use the display as an external monitor. The device does not support connection of other products of the same interface.

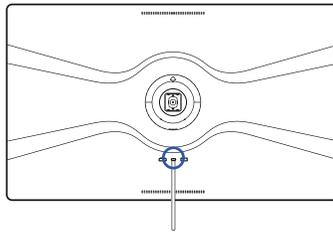

**USB Type-C®**

Connects to: external hard drive or flash drive, card reader, keyboard, mouse.

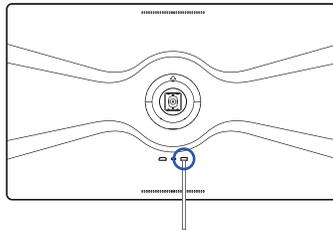

**USB Type-A®**

Connects to: external hard drive or flash drive, card reader, keyboard, mouse.

NOTE: When the device is connected to a PC or laptop, some images may have display errors, depending on the graphics card.

# Screen Mirroring

---

## Screen Mirroring on iOS Devices

1. Ensure that your iOS device and the rolling TV are connected to the same network.
2. On your iOS device, navigate to the Control Center and tap on the Screen Mirroring widget.
3. Tap on the device " LD32FH8183MT " to connect and start mirroring.



## **Screen Mirroring**

---

### **Screen Mirroring on Android™ Devices**

#### **Method 1**

1. Ensure that your Android™ device and the rolling TV are connected to the same network.
2. On your Android™ device, navigate to the Control Center and tap on the Screen Cast widget. Tap on the device " LD32FH8183MT " to connect and start casting.

#### **Method 2**

1. Navigate to <http://usbdisplay.cn> and download the app on your Android™ device, and then select " LD32FH8183MT " to connect and start casting.

### **Screen Mirroring on Laptops**

1. Navigate to <http://usbdisplay.cn> and download the app on your laptop, and then connect to the Rolling TV' hotspot LD32FH8183MT .
2. Run the client app on your laptop, select LD32FH8183MT , then follow the instructions to start mirroring.

## Troubleshooting

---

### No image and sound

- Please check if the product is powered on normally.
- Please check if the power adapter is powered on normally.
- Please connect other products to see if the wall outlet is faulty.  
Please check if the power cable at the back of the display is properly connected.

### The product has unexpected shutdown

- Please check if battery is low.
- Please check if the auto shutdown function is within the set time period.
- Please check if the Product has entered Eco mode and the display is under auto shutdown status.
- If the battery is overheating, the Product will shut down automatically to trigger protection mechanism.

### **No signal when external HDMI® device is connected**

- Please reboot the Product.
- Please reconnect the HDMI® cable.
- After the Product is rebooted, please restart the external HDMI® device.

### Display error

- As the Product's display has millions of pixels, tiny black spots or highlight color light spots may be shown on the display in PPM units. These neither represent abnormal display status, nor affect the Product's performance and reliability.
- When viewing the Product in different locations, the user may notice different brightness and display colors. This is a normal phenomenon that belongs to the Product's characteristics and is unrelated to the Product's performance.

### Abnormal sound

- Circuit buzzing/display signal noise: The Product may emit a low noise due to high currents when the circuit has high-speed switching. This noise does not affect the Product's performance and reliability.

## Specifications

---

CPU	MideaTek MT8183 Octa-core 4*ARM Cortex A73@2.0GHz / 4*ARM Cortex A53@2.0GHz
RAM	8GB
Storage	128 GB
OS	Android™ 13
Display	32" Diagonal
Resolution	1080x1920 IPS
Touchscreen	10-Point Capacitive Touchscreen
Aspect Ratio	16:9
Wi-Fi®	WiFi® 5 802.11 a/b/g/n/ac 2.4G + 5G
Bluetooth®	5.0
Brightness	250cd/m <sup>2</sup> max
Refresh Rate	60Hz
Connections	HDMI® x1 USB-C® x1 USB® 3.0 x1 DC In x1
Gravity Sensor	Supports 90°
Speaker	Built-in 8Ω 5W*2 Speakers
Microphone	Built-in Microphone
Power Adapter	18V 6A
Operating Temperature	32° - 122°F

## **Kullanıcının Dikkatine**

- 1-) Ürünün garanti süresi içerisinde orijinal ambalajı ve satın alış faturasının kesinlikle bulundurulması gerekmektedir.
- 2-) Ürün üzerindeki etiketleri ve S/N ibareli barkodu kaybetmeyiniz, yırtmayınız, çıkarmayınız, karalamayınız. Seri Numarası okunmayan ürünler GARANTİ DIŞI'dır.
- 3-) Ürünü düşürmeyiniz, çarpmayınız, su ile temas ettirmeyiniz; üzerine ağır cisimler yerleştirmeyiniz; uzak tutunuz; nem, toz, vb. ortamlardan koruyunuz. Fiziksel hasarlı ürünler ile cihazın çalıştığı ortamın tozlu, nemli ve sıcak olması nedeniyle oluşan arızalar GARANTİ DIŞI sayılmaktadır.
- 4-) Bu garanti belgesi sadece üzerinde yazan ürün modeli için geçerlidir.
- 5-) Voltaj değişimlerinden, elektrik tesisatından veya topraklamadan kaynaklanan arızalar GARANTİ DIŞI'dır.
- 6-) Yetkili servis elemanlarından başka kişi ya da kurumlarca ürüne yapılacak fiziksel müdahale ürünün garantisini sonlandırır.
- 7-) Ürünle ilgili bir sorun olduğunda satın aldığınız bayi aracılığıyla teknik servisimize gönderebilirsiniz.
- 8-) Ürününüzü aldığınızda Garanti Belgesini Yetkili Satıcınıza onaylattırınız

## **Hasar Teknik Desteği**

Garanti kapsamındaki ürünün yetkili servisin dışındaki herhangi bir teknik servis yerinde ya da kendiniz tarafından ürüne yapılacak fiziksel müdahale ürünün garantisini sonlandırır.

Aşağıdaki şartlardan biri veya hepsi olması durumunda yetkili teknik servisimizden hizmet alınız. Ama öncesinde ürünü güç kablolarından ve bağlantı kablolarından çıkarınız.

1. Sıvı dökülüp yada içine obje kaçtığına ,
2. Suya maruz kaldığına ,
3. Çalıştırma talimatları uygulandığı halde çalışmadığına yada performansında beklenmedik bir değişiklik görüldüğünde,
4. Ürünün düşürülmüş yada zarar görmüş olduğu durumunda

## **Kullanım Hatalarına İlişkin Örnekler**

1. Ürünün kullanım kılavuzunda belirtilen şekilde kullanılmamasından kaynaklanan hatalar.
2. Ürün sıcak ve aşırı nemli ortamlarda çalıştırıldığı zaman kısa devre yapabilir.
3. Ürün kutusu içinde üretici firma tarafından verilen bağlantı kabloları dışında ek bağlantı kabloları kullanmak.
4. Kullanıcı yada yetkili olmayan servisler tarafından yapılan müdahaleler veya parça eklenip yada çıkarılması.
5. Cihazlara dışarıdan yapılan fiziksel darbeler ve kırılma gibi hasarlar.
6. Cihazın seri numarasının tahrip edilmesi yada sökülmesi.
7. Orijinal yedek parça yada sarf malzemesi kullanılmamasından meydana gelen arızalar.
8. Yangın , yıldırım , sel , su basması , deprem gibi doğal afetlerden oluşan hasarlarda.

## **Periyodik bakım gerektiren durumlar**

Ürün kullanım kılavuzunda belirtilen durumlara dikkat edildiği müddetçe bakım gerektirmemektedir. Ürün ancak normal dışı bir çalışma gösterdiğinde veya hiç çalışmadığında yetkili servisler tarafından yapılacaktır.

## **Bakım, onarım ve kullanmada uyulması gereken kurallar**

1. Tozlu ortamlarda tozlanmasını engelleyecek örtü kullanınız
2. Alt tarafta bulunan vidaları sökmeyiniz

3. Tuşlara sert basmayınız
4. Üzerine sıvı türü nevi ürünleri dökmeyiniz
5. Üzerine ağır malzeme bırakmayınız

#### **Taşıma sırasında dikkat edilecek hususlar**

Cihazı dikkatlice kutusundan çıkarın ve tüm aksesuarları kaybolmalarını için kutunun içinde muhafaza edin.Cihazı nakliye hasarı olasılığına karşı kontrol edin.Eğer cihazınız hasarlıysa ve çalışmıyorsa derhal satın aldığınız yeri bilgilendirin.Eğer cihaz doğrudan size gönderildiyse , gecikmeden Gönderen firmaya bilgi verin. Yalnızca alıcı (cihazı alan müşteri veya firma) nakliyat zararı için hak talep edebilir.

Cihazı ileride taşıma olasılığına karşı orijinal kutuyu ve paket materyallerini saklayın.

1. Ateş ve darbelerden koruyunuz,ıslak ve rutubete maruz bırakmayınız.
2. Yüksek dereceli sıcaklıklardan uzak tutunuz
3. Ürün kutusunun orijinal kutusu içerisinde yada koruyucu köpük maddelerle taşınmalıdır.

#### **Güvenlik Talimatları**

Talimatları oku: Ürün çalıştırılmadan önce tüm güvenlik uyarıları ve kullanım talimatları okunmalıdır.

Temizleme: Temizlemeden önce ürünün PC bağlantısından çıkartılmalıdır.Sıvı temizleme malzemeleri kullanmayınız.Temizlik için nemli bez kullanınız.

Yerleştirme: Başka bir objenin üstüne yada sabit olmayan bir masanın üstüne ürünleri koymayınız.Ürün düşebilir,zarar görebilir.

Sıvı ve nem: Ürünü suya yakın yerlerde kullanmayınız.

Isı: Direk güneş ışığında maruz bırakmayınız

Objeye ve sıvı girişi: Ürün içine obje sokmayınız.Ürün üzerine sıvı dökmeyiniz.

Hizmet: Ürünün kapaklarını açarak tamir etmeye çalışmayınız.Yetkili servisin müdahalesini bekleyiniz.

Parçaların değiştirilmesi: Parçaların değiştirilmesi yetkili servisler tarafından yapılır.Tarafınızca yapacağınız değiştirilmiş parçalar ürüne hasar verebilir.

Not:Kullanım ömrü 7 yıldır.

#### **ÜRETİCİ:**

**Shenzhen Suntek Technology Co.,Ltd**

ADRES: Flat/Rm 1701 17/F , Henan Building. NO. 90, Jafee Road,Wanchai, China

#### **İthalatçı Firma/ Yetkili servis istasyonu/Yetkili Temsilci Firma**

**Segment Bilgisayar Dış Tic. A.Ş.**

Firmanın Adresi: Deliklikaya Mah. Fersah Cad. No:136 Arnavutköy/İstanbul/ Turkey

Tel: . 444 7 899

E-mail: destek@segment.com.tr

Web: www.segment.com.tr

Menşei: Made in P.R.C.(Çinde Üretilmiştir.)

# GARANTİ BELGESİ

## WARRANTY CARD

İKİ YIL SÜREYLE FİRMA GARANTİSİNDEDİR.

**Manufacturer/Üretici Firma: Shenzhen Suntek Technology Co.,Ltd**

Address: Flat/rm 1701 17/f, Henan Building. No. 90 Jafee Road, wanchai, China

**İMALATÇI veya İTHALATÇI FİRMA**

**Segment Bilgisayar Dış Ticaret A.Ş.**

Firmanın Adresi: Deliklikaya Mah. Fersah Cad. No:136 Arnavutköy/İstanbul/ Turkey

Tel: . 444 7 899

E-mail: destek@segment.com.tr

Web: www.segment.com.tr

İmza ve Kaşesi :

# segment

**SEGMENT BİLGİSAYAR DIŞ TİC A.Ş**

Deliklikaya Mah. Fersah Cad. No:136 İç Kapı No:1  
Arnavutköy/İSTANBUL / Türkiye Tel: 444 7 899 - Fax: 0212 4013727  
V.N.: 7580670571 V.D.: Büyükkçekmece V.D.

MALIN;

**CİNSİ : Touch Smart Portable Monitor**

**MARKASI : RAMPAGE**

**MODELİ : LD32FH8183MT**

BANDROL ve SERİ NO :

TESLİM TARİHİ ve YERİ :

AZAMI TAMİR SÜRESİ : 20 İş Günü

GARANTİ : 2 Yıl

SATICI FİRMANIN

ÜNVANI :

ADRESİ :

TEL-FAKS :

FATURA TARİHİ ve NO :

TARİH-İMZA-KAŞE:

GARANTİ ŞARTLARI

1) Garanti süresi, malın teslim tarihinden itibaren başlar ve ...2.....yıldır.

2) Malın bütün parçaları dahil olmak üzere tamamı garanti kapsamındadır.

3) Malın ayıplı olduğunun anlaşılması durumunda tüketici, 6502 sayılı Tüketicinin Korunması Hakkında Kanunun 11 inci maddesinde yer alan;

a- Sözleşmeden dönme,

b- Satış bedelinden indirim isteme,

c- Ücretsiz onarılmasını isteme,

ç- Satılanın ayıpsız bir misli ile değiştirilmesini isteme,

Haklarından birini kullanabilir.

4) Tüketicinin bu haklardan ücretsiz onarım hakkını seçmesi durumunda satıcı; işçilik masrafı, değiştirilen parça bedeli ya da başka herhangi bir ad altında hiçbir ücret talep etmeksizin malın onarımını yapmak veya yaptırmakla yükümlüdür. Tüketici ücretsiz onarım hakkını üretici veya ithalatçıya karşı da kullanabilir. Satıcı, üretici ve ithalatçı tüketicinin bu hakkını kullanmasından müteselsilden sorumludur.

5) Tüketicinin, ücretsiz onarım hakkını kullanması halinde malın;

- Garanti süresi içinde tekrar arızalanması,

- Tamiri için gereken azami sürenin aşılması,

- Tamirinin mümkün olmadığı, yetkili servis istasyonu, satıcı, üretici veya ithalatçı tarafından bir raporla belirlenmesi durumlarında;

Tüketici malın bedel iadesini, ayıp oranında bedel indirimini veya imkân varsa malın ayıpsız misli ile değiştirilmesini satıcıdan talep edebilir. Satıcı, tüketicinin talebini reddedemez. Bu talebin yerine getirilmesi durumunda satıcı, üretici ve ithalatçı müteselsilden sorumludur.

6) Malın tamir süresi 20 iş gününü, binek otomobil ve kamyonetler için ise 30 iş gününü geçemez. Bu süre, garanti süresi içerisinde mala ilişkin arızanın yetkili servis istasyonuna veya satıcıya bildirim tarihi, garanti süresi dışında ise malın yetkili servis istasyonuna teslim tarihinden itibaren Başlar. Malın arızasının 10 iş günü içerisinde giderilememesi halinde, üretici veya ithalatçı; malın tamiri tamamlanıncaya kadar, benzer özelliklere sahip başka bir malı tüketicinin kullanımına tahsis etmek zorundadır. Malın garanti süresi içerisinde arızalanması durumunda, tamirde geçen süre garanti süresine eklenir.

7) Malın kullanma kılavuzunda yer alan hususlara aykırı kullanılmasından kaynaklanan arızalar garanti kapsamı dışındadır.

8) Tüketici, garantiden doğan haklarının kullanılması ile ilgili olarak çıkabilecek uyuşmazlıklarda yerleşim yerinin bulunduğu veya tüketici işleminin yapıldığı yerdeki Tüketici Hakem Heyetine veya Tüketici Mahkemesine başvurabilir.

9) Satıcı tarafından bu Garanti Belgesinin verilmemesi durumunda, tüketici Gümrük ve Ticaret Bakanlığı Tüketicinin Korunması ve Piyasa Gözetimi Genel Müdürlüğüne başvurabilir.



## EC DECLARATION OF CONFORMITY /UYGUNLUK BEYANI

### SHENZHEN SUNTEK TECHNOLOGY CO.,LTD

ADD: Flat/Rm 1701 17/F, Henan Building. NO. 90, Jafee Road,Wanchai, China  
TEL: 852-3115-8800EXT.28827 FAX: 852-3115-8801

We/ Biz

Shenzhen Suntek Technology Co.,Ltd

ADRES: Flat/Rm 1701 17/F, Henan Building. NO. 90, Jafee Road, Wanchai, China

**CİNSİ** : Touch Smart Portable Monitor

**MARKASI** : RAMPAGE

**MODELİ** : LD32FH8183MT

The above-mentioned products produced by us under our own responsibility

Bizim tarafımızdan üretilen yukarıda belirtilen ürünler kendi sorumluluğumuzdadır;

Shenzhen Suntek Technology Co.,Ltd

ADRES: Flat/Rm 1701 17/F, Henan Building. NO. 90, Jafee Road, Wanchai, China

Bu uygunluk beyanı aşağıdaki harmonize edilmiş standartlara uygunluğuna dayanmaktadır

The above mentioned product have been tested by us with listed standards and found in compliance with the following European Directives./ Radio Equipment Directive 2014/53/EU,

#### Test Standards

Test Standartları /Test Standartları

EN 55022:2010

EN 55024:2010

EN 61000-3-2:2014

EN 61000-3-3:2013

EN 60950-1:2006 + Aml1:2009 + Ami: 2010 + Am12:2011+ Am 2:2013

Year of the CE marking/ CE işaretinin yapıldığı yıl: 2015 In accordance with the following EU directives

Aşağıdaki AB direktifleri uyarınca: Radio Equipment Directive 2014/53/EU,

Date : 2024

Signed by the manufacturer or on behalf of the manufacturer:

Üretici tarafından veya üretici adına imza:

Shenzhen Suntek Technology Co.,Ltd

ADRES:Flat/Rm 1701 17/F, Henan Building.NO.90,Jafee Road, Wanchai, China

Contact person / İlgili kişi: KELLY WANG

Engineer/ Ünvan: Mühendis



**Üretici/Manufacturer: Shenzhen Suntek Technology Co.,Ltd**

ADRES: Flat/Rm 1701 17/F , Henan Building. NO. 90, Jafee Road,Wanchai, China

**İthalatçı/Importer: Segment Bilgisayar Dış Tic. A.Ş.**

Adres: Deliklikaya Mah. Fersah Cad. No:136 Arnavutköy/İstanbul/ Turkey /Tel: . 444 7 899

**Made in P.R.C.**

