 



# s-link

## Akıllı Uydu Kumandası Kullanım Kılavuzu

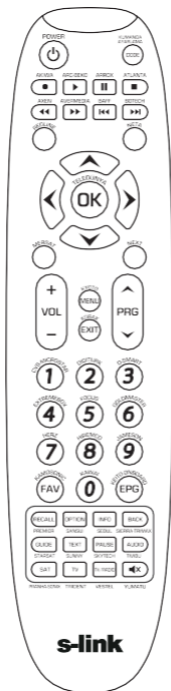

 s-link



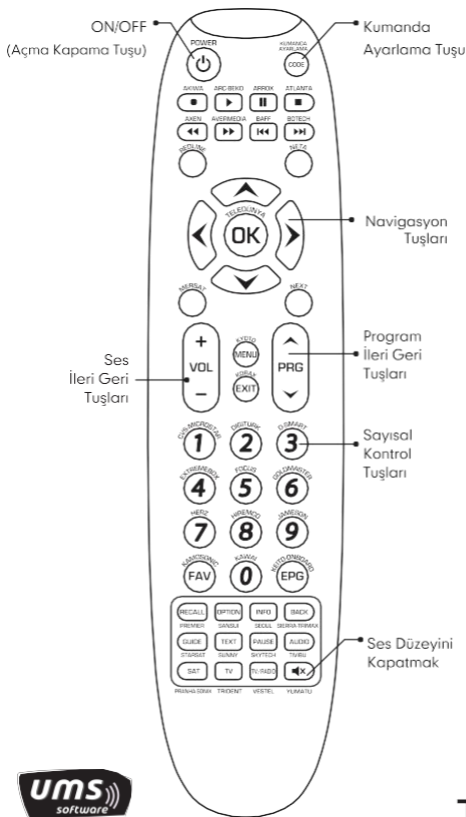

## Markaya Göre Arama

 
**Not:** Bu adım sadece kumanda üzerinde var olan markalar için geçerlidir.



1- Uydu cihazınızı açınız, kumandanızı cihaza yöneltiniz.

2- Kumandanızın üzerinde yazılı markanın olduğu tuşa basılı tutunuz.  
(7 saniye sonra marka kodlarını aramaya başlayacaktır.)

(Örneğin: AKIWA için kayıt tuşu)

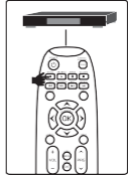


3- Kumandanızın üzerindeki ışık yanıp sönerek cihazınıza ait kodları aramaya başlayacaktır.


((( Led ışık yanıp sönecek )))



 4- Kumandanız cihaza ait kodu bulduğunda cihazınız otomatik olarak kapanacaktır. (maks. 2 dk.)

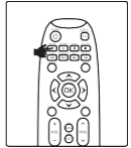

 5- Cihazınız kapanır kapanmaz basılı tuttuğunuz tuşu bırakınız. Kumandanız kullanıma hazırdır.

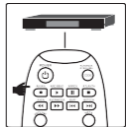

**Not:** Marka arama tuşu cihazınızı bulmuyorsa, otomatik aramayı deneyiniz.

## Kod Numarası ile Çalıştırma

- 1- Uydu cihazınızı çalışır konuma getiriniz.



- 2- Kullanım kitapçığının arka sayfalarındaki listeden markaya ait 4 haneli kodları bulunuz.

Code Tuşu



- 3- Kumanda üzerindeki CODE tuşuna led ışığı yanana kadar basılı tutunuz. (yaklaşık 3 sn.)

Next-3384

(( Led ışık sabit yanacak ))

- 4- 4 haneli kodu giriniz.

 


(( Led ışık sönecek ))

- 5- Kumandanız kullanıma hazırdır.



- 6- Kumandanın cihazı çalıştırması durumunda aynı markaya ait diğer kodları deneyiniz.

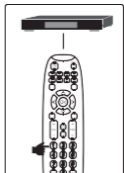

## Otomatik Arama Çalıştırma Yöntemi

- 1- Uydu cihazınızı çalışır konuma getiriniz ve kumandayı cihaza doğrultunuz.

 


- 2- Kumanda üzerindeki CODE tuşuna led ışığı yanana kadar basılı tutunuz. (yaklaşık 3 sn.)

((( Led ışık sabit yanacak )))



- 3- POWER tuşuna bir kere basarak otomatik aramayı başlatınız. (Bu işlem cihaza ait fazla kod olduğundan 15-20 dk. sürebilir.)




- 4- Kumanda cihazınıza ait kodu bulduğunda cihazınızı kapatacaktır.



- 5- Uydu cihazınız kapanır kapanmaz 2 sn içinde POWER tuşuna basınız.

- 6- Kumandanız kullanıma hazırdır.

 - 7- Kumandanızı cihazı çalıştırmaması durumunda yukarıdaki adımları tekrar deneyiniz.


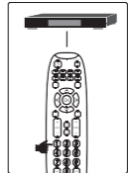


## Öğrenme Özelliğini Kullanma\*

Bu özellik bazı modellerde bulunmaktadır. Bilgi için satış noktasına danışın.


Bu konumda akıllı kumandanıza başka bir kumandanın özelliklerini yükleyebilirsiniz.

  - 1- CODE tuşuna led ışığı sabit yanana kadar basılı tutunuz.  
(3 sn kadar)
- 2- Rakam tuşları ile 8888 rakamını girdiğinizde led ışığı yanıp sönmeye başlayacaktır. Artık kumandanız öğrenme konumundadır.
- 3- Akıllı kumandayı ve kopyalanacak kumandayı ledler birbirine karşılıklı gelecek şekilde 1-3 cm mesafede tutunuz.
- 4- İlk olarak hangi tuşu kopyalayacaksınız akıllı kumandanızda aynı tuşa basıp bırakınız. Led ışığı sabit olarak yanacaktır. Kopyalanacak kumandada karşılık gelen tuşa basıp 1-2 sn. bekleyiniz. Akıllı kumandanın led ışığı yanıp sönmeye başladığında tuş kopyalama işlemi tamamlanmıştır.
- 5- Aynı işlemi kopyalamak istediğiniz diğer tuşlar için tekrarlayınız.
- 6- Çalışmanızı tamamladıktan sonra öğrenme konumundan çıkmak için CODE tuşuna basınız.

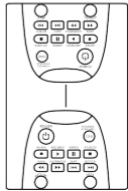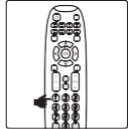

**Not:** 30 sn. hiçbir tuşa basılmaması durumunda akıllı kumanda otomatik olarak öğrenme konumundan çıkar.

# EU

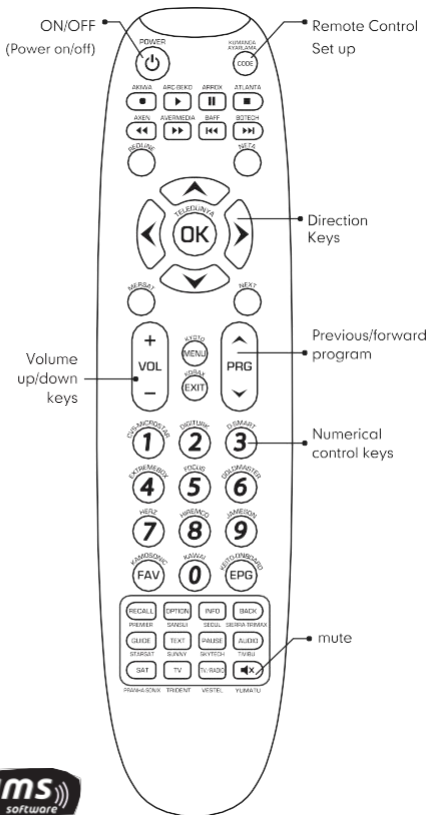 


## SEARCH ACCORDING TO A BRAND

**Not:** This process is valid only for the brands that are included in the remote control.



 **1-** Turn on your satellite device, point your remote control on the device.

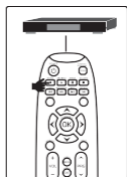

**2-** Push continuously to the key which has the brand of the remote control, printed on it. (After 7 seconds, it will start searching the codes of this brand) (E.g: record key for AKIWA)

**3-** It will start searching the codes which belong to your device as the led on the remote control blinking.

 


((( LED light will blink )))

**4-** When your remote control finds the device's code, your device will turn off automatically (max 2 minutes)



**5-** When your device turns off, release the key that you were pushing, now your remote control is ready for use.

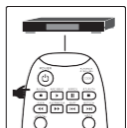

**Note:** If the brand searching key can not find your device, try automatic search.



## OPERATING BY CODE NUMBER

- 1-** Turn on your satellite device



- 2-** Find the 4 digit code from the list which is at the back of the user's manual. (E.g: NEXT-3384)

Code key



- 3-** Keep pushing on the CODE key on the remote control until the led is on (about 3 seconds)

Next-3384

((( LED light will blink )))

- 4-** Enter the 4 digit code.

 


((( LED light will turn off )))

- 5-** Now your remote control is ready for use.



- 6-** If the remote control does not operate on your device, try other codes which belong to the same brand.

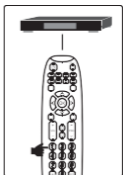

## AUTOMATIC SEARCH OPERATING METHOD

- 1- Turn on your satellite device and point the remote control to the device.

 


- 2- Keep pushing the CODE key on the remote control until the led id on (about 3 seconds)

(( Led light will illuminate steady ))



- 3- Start automatic search by pushing the POWER key once. (this operation might take 15 – 20 seconds since there are many codes belonging to the device)




- 4- Your device will turn off when the remote control finds the code which belongs to your device.



- 5- Push the POWER key whenever your satellite device turn off within 2 seconds.

- 6- Now your remote control is ready for use.

 - 7- In case of the remote control does not operate your device, repeat the above steps once again


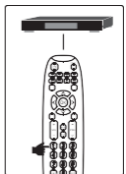


## USING THE LEARNING FUNCTION

This feature is available at some models. Consult from a sales point.

In this function, you can load another remote control's functions to your universal remote control.

  - 1- Keep pushing the CODE key until the led is continuously on. (About 3 seconds)
- 2- The led will start blinking when you enter 8888 number by the direction keys. Now your remote control's learning function is activated.
- 3- Hold both the universal remote control and the remote control to be copied on the position that the leds to be faced, at around 1 – 3 cm distance.
- 4- Push and release the first key that you want to copy on your remote control, the led will be continuously on. Wait 1 – 2 seconds after pushing the corresponding key on the remote control to be copied. When the led of the universal remote control starts blinking, the key copying process will be completed.
- 5- Repeat the same process for all the other keys you want to copy.
- 6- When you are done with the operation, push CODE key for exiting the learning function.

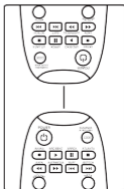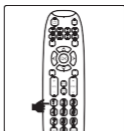

**Note:** In case of not pushing any of the keys for 30 seconds, the universal remote control will exit from the learning function automatically.

## RESTORING THE FACTORY SETTINGS

Keep pushing CODE key until the led is continuously on and enter 1111. NOW YOUR REMOTE CONTROL IS RESETED. It is suggested to reset the remote control before programming.

**Uydu Markaları**  
(Satellite Brands)

**Uydu Kodları**  
(Satellite Code)

ABSYSS	3185
ACIKO	3408,3309,3484,3208.3487,3235.3282, 3055,3326,3294,3488
AIWA	3082
AKAI	3060.3208.3226.3487,3225.3273. 3278. 3293. 3301
AKIWA	3408,3420,3437,3484,3386,3302,3309,3326
AMSTRAD	3416,3433,3434,3386,3089.3309,3144. 3185.3364,3233.3215.3219.3314.3259
AMT	3326
ARCELIK	3406,3452,3043,3104,3116,3165,3218, 3266,3265,3286,3297,3299, 3300
ARROX	3403,3450,3372,3302,3216,3371,3272,3292
ASAHI	3395,3261,3251,3282,3287, 3300, 3324, 3219
ASIASAT	3088,3019
AST	3108
ASTRA/ASTRACOM	3389,3408,3302,3144,3326,3265.3219,3312
ASTELINK	3091
ASTON	3179
ATALANTA	3085
ATLANTA	3423,3468,3395,3074,3480,3455,3501, 3478,3487,3003,3205,3189,3208,3227, 3302,3308,3311, 3368
AVERMEDIA	3424,3431,3292,3302,3282 3475,3326
AXEN	3393,3469,3282
AVM	3418
BAFF	3425,3444,3371,3282,3093,3186,3228, 3386,3229,3236, 3252, 3287, 3289, 3293, 3300, 3324, 3459
BAFTEC	3415,3052,3166,3186,3320, 3302, 3066,3287
BAUSAT	3237

**Uydu Markaları**  
(Satellite Brands)

**Uydu Kodları**  
(Satellite Code)

BLACKBOX	3404
BLACKTIGER	3400,3420,3372,3309
BLUEBOX	3302
BEKO	3406,3452,3043,3104,3371,3467,3116, 3165, 3184, 3218, 3265, 3266, 3286, 3297, 3299,3224
BENJAMIN	3418,3419,3432,34083083,3018,3386, 3021,3124, 3127, 3132, 3187, 3188, 3258, 3266, 3185, 3363
BEON	3008
BESAT	3126
BESTECH	3417,3371,3302,3312, 3294
BESTTEL	3403,34323208,3487,3302,3371
BIGALINE	3326,3302,3372
BOFTEC	3186
BOTECH	3428,3430,3388,3389,3392,3309,3052. 3386,3055.3341,3372,3490,3065.3137. 3139.3183.3271.3272.3283.3296.3325. 3360.3131, 3063,3053,3366,3367, 3320, 3333, 3375,
BRIGHT	3379,3134
BRAVOO	1368,1380,3430,
CALIBER	3432,3094,3031,3115,3119,3136,3144
CHEROKEE	3160,3254
CITYBOX	3317,3341,3386,3364
CITIZEN	3208
CLARION	3212,3219
COMAG	3239
CONAX	3265,3251
CONDOR	3169
CREA	3416,3444,3365,3259,3299
COSMOS	3469,3282
COSHIP	3219, 3220
CVS	3403,3427,3436,3408,3418,3498,3494, 3395,3074,3484,3227,3469,3217,3282, 3302,3326,3456,3364.3251,3215.3371. 3229,3436
CTAGON	3411
DAUMLING	3029
DAYSTAR	3260

**Uydu Markaları**  
(Satellite Brands)

**Uydu Kodları**  
(Satellite Code)

DAYTE	3096, 3001
DECKTRON	3416,3444,3265
DIGIBOX	3302,3212,3282
DIGICAG	3131
DIGIFUSION	3288
DIGILINE	3403,3386,3309,3131,3372,3229,3265, 3252,3371,3326,3302
DIGIMASTER	3407,3063,3165,3337,3464
DIGIPOLL	3364,3390,3326,3312,3309
DIGISAT	3131
DIGISTAR	3236
DIGISTARBOX	3371
DIGITAL-BOX	3252
DIGITURK	3245,3391,3444,3073, 3046, 3222, 3244, 3276, 3297, 3299.3232, 3265
DIGIX	3131
DIGINEXT	3219
DIGLINK	3372
DIORA	3212
DISCOVERY	3209,3228, 3213
DIXSTAR	3326
DIVITONE	3231
DRAGON	3055, 3067, 3183
DRAKE	3294
DREAM BOX	3223, 3303
D-SMART	3224. 3241.3465 3250. 3269.3466,3281
D-SAT	3427,3326
DYNASAT	3260,3261,
ECHOSAT	3364,3144,3314,3282,3326
ECHOSTAR	3009. 3023. 3149. 3190. 3263. 3298. 3144
ELSA	3233
ELTON	3185
EMME ESSE	3190
EROSAT	3099. 3282. 3326.
EUROGRAFF	3113
EUROSAT	3449,3099, 3282, 3326
EUROWORLD	3302
EXPER	3097
EXTREMEBOX	3384,3365,3326,3212
FAIRMATE	3233

Uydu Markaları (Satellite Brands)	Uydu Kodları (Satellite Code)
FINEPASS	3262,3278
FINEST	3131,3212, 3320
FOBEM	3364,3086,3117
FOCUS	3141,3213,3265,3144
FORTEC STAR	3255,3453
FORLAND	3454
FRAU HOLLE	3029
FREEMAX	3469
FREESKY	3364
FULLY	3326,3302
FUJISAT	3165,3215
FUJITIME	3302
FUJIYAMA	3260
GAMMA	3123
GECCO	3184
GEIMA	3021
GM	3085
GMI	3085, 3003
GLOBO	3371
GOLD	3117
GOLDENINTERSTAR	3265
GOLDMASTER	3491,3404,3407,3411,3412,3416,3426, 3428,3063, 3069,3385,3337,3130, 3131, 3165, 3184, 3185, 3176, 3212, 3235, 3259, 3243, 3274,3361,3369,3374,3428,3464,3481
GOLDSMART	3408,3428
GOLDSTAR	3464,3408,3428,3386
GOSHIP	3219
GRANDSON	3289,3300, 3324
GRUNDIG	3195,3309
HARWARD 3233	
HAUPPAUGE	3198
HERZ	3408,3414,3415,3484,3386,3326,3309, 3233, 3066,3144,3230
HEMCO	3131
HIREMCO	3389,3432,3212,3382,3322,3315, 3365,3470,
HIRSCHMANN	3214
HOMETECH	3494,3363,3469,3282
HUMAX	3440,3140, 3178, 3199
HWALIN	3100

**Uydu Markaları**  
(Satellite Brands)

**Uydu Kodları**  
(Satellite Code)

HYUNDAI	3416,3417,3148. 3171. 3212. 3123. 3294. 3312. 3066. 3266
ID DIGITAL	3178 .3055
INPAX	3428,3223.3315. 3362. 3302.3458
INTERMIL	3022
INTERSAT	3036.3112.3125. 3206
ITALTEL	3190
INTUM	3469,3282
ITT SCHAUBLorenZ	3204, 3205
ITT	3106, 3204, 3205
JBM	3408,3215,3428
JIMEX	3280,3179
JAMESON	3386,3395,3397,3418,3393,3437,3309, 3055,3302,3364,3282,3372,
KAWAI	3397,3443,3446,3448,3449,3296,3326,3364
KAMOSONIC	3403,3431,3386,3389,3320, 3302, 3131,3309,1371
KAON	3389,3131,3326
KEITO	3403,3252,3371
KODLU KUMANDA	3051.3052.3131
KONKA	3233
KORAX	3389,3414,3427,3491,3481,3484,3477, 3468,3326,3455,3444,3427,3408,3401, 3393,3309,3302,3265,3397
KVISION	3294
KING	3357
KYOTO	3414,3052,3085, 3088, 3090, 3045, 3143, 3147, 3167, 3170, 3229, 3217, 3144
LASAT	3090, 3000, 3028
LEADER	3239
LEGEND	3190
LIFEMAX	3393,3476,3323
LINX	3422,3309,3326
LINUX	3428
LOGIX	3131
LORENZENINC	3000, 3027, 3028, 3029, 3030, 3031, 3032, 3033, 3034, 3035
LUXOR	3076
MAGIX	3265
MAGNUM	3093.3024. 3025



**Uydu Markaları**  
(Satellite Brands)

**Uydu Kodları**  
(Satellite Code)

MANHATTAN	3002,3024, 3025, 3026, 3130
MEDIA COM	3260
MEDIALINK	3368
MEGA	3047,3174, 3238
MEGASAT	3386
MICROSTAR	3415,3418,3427,3436,3469,3395,3282, 3251. 3302. 3066
MILLENIUM	3282
MICROTIME	3469,3282
MINIBOX	3302
MINISAT	3125,3172
MINTON	3216
MOONSTAR	3215. 3219. 3055.3183,3364
MOTOSAT	3275
M-NET	3105
MULTICHOICE	3017, 3040
MYSAT	3492,3357,3326
MEGASTAR	3235,3337
MEWYORK	3097
MERSAT	3403,3418,3432,3371.3326.3386,3469, 3484,3448,3479,3372,3494,3282.3202.3302
NETA	3451,3079.3080. 3012. 3014. 3154. 3264. 3246. 3295,5509
NETEX	3312,3341,3219
NETRON	3183
NEWNEXT	3214
NEWWAVE	3240
NEWLINE	3364
NEXTIME	3413,3062, 3252
NEXT	3133,3384,3442,3365,3212,3054,3461, 3098,3282,3110, 3200, 3113,3380,3164, 3131,3163,3183,3228,3238,3249,3281, 3387,3409,3421,3310,3313,358,3359, 3370,3376,3377, 3367, 3289,3322, 3327,3457,3460,3471
NEXTKEY	3415,3212,3219, 3251, 3066
NEXTPOWER	3133
NEXTSTAR	3435,3212,3133,3131,3183, 3282,3169, 3228, 3240,3242, 3247, 3275, 3289, 3327,

**Uydu Markaları**  
(Satellite Brands)

**Uydu Kodları**  
(Satellite Code)

	3310,3326 ,3365
NEXTWAVE	3326,3064, 3109, 3123, 3159, 3227,
3229,	3256, 3240, 3242,3144
NEOTIONBOX	3185
NOKIA	3106,3204, 3205, 3248
NOVA	3013, 3146, 3152
NOVATECH	3302,3309
OLIMPIA	3130,3063
OMEGA	3238
ONBOARD-BOX	3403,3252,3371
ONWA	3131,3233, 3185
OPENTEL	3213
ORA	3131,3233
ORIENT	3257,3265
PACE	3489,3015,3017,3039,3041,3042,
	3046,3150,3156,3175,
PANASAT	3038
PATRIOT	3155
PEYSS	3414,3379,3061, 3217
PHILIPS	3073, 3046
PILOT	3004,3037, 3236
PIRANHA	3396,3326
PIONEER	3050, 3095
PIKO	3309
PLANET	3114,3120, 3234
PREMIER	3414,3425,3437,3440,3441,3058,3087,
	3093, 3142, 3143, 3211, 3230, 3237,
	3215,3259,3364,3166
PROFILO	3188,3221
PROZEG	3277
POWERSAT	3411
RADIX	3034
RAMSAT	3408,3484,3364
RC 2	3074
REDLINE	3415,3427,3428,3429,3052,
	3439,3462 3055, 3056, 3183,3185, 3291,
	3294, 3312, 3341,3463,3471
REGAL	3186
REX	3186

**Uydu Markaları**  
(Satellite Brands)

**Uydu Kodları**  
(Satellite Code)

ROADMASTER	3008, 3031,3112,3121,3128,3131
ROWELL	3484,3309,3326
RSAT	3289
RUBENIS	3216,3313
SABA	3405,3437,3372
SAGEM	3010
SAKURA	3415,3144, 3233, 3213
SALURA	3011
SAMSUNG	3074, 3168, 3227
SAMUX	3418,3427,3428,3433,3475,3053,3326,3312
SANGEAN	3092
SANSUI	3213,3069,3070,3251,3291, 3185
SATEX	3208,3487
SATELLITE	3003
SATARBOX	3212
SATCOM	3213,3294
SATURK	3418,3393
SEG	3192, 3193, 3203, 3245
SEIKON	3265, 3055
SEOUL	3415,3432,3066, 3144, 3365, 3212, 3233, 3294, 3322
SERVISAT	3008, 3192, 3193, 3203
SET	3005, 3016, 3048, 3049, 3101
SCHAUPLORENZ	3451,3204, 3205, 3216, 3264
SETLUX	3145
SHADOW	3233,3214
SHEEN	3282
SIEMENS	3221
SIERRA	3397,3408,3302,3326,3484,3488
SILVERMAX	3418,3448,3326,3282
SIMKO	3006
SKY BOX	3223
SKY TELEVISION	3078
SKYLAB	3078
S-LINE	3326,3484
SABA	3372
SKYMASTER	3214, 3285, 3185
SKYTECH	3408,3428,3429,3436,3448, 3394,3398, 3399,3333,3484,3341,3302,3383,3219, 3240,3334,3312,3064,3272,3446

**Uydu Markaları**  
(Satellite Brands)

**Uydu Kodları**  
(Satellite Code)

SKYMAX	3446
SHOV	3326
SMART	3384
SNX	3364
SOFTLINE	3219
SONASHI	3208
SONIX	3396,3275-3320
SOUTHLINE	3364
STAR DIJITAL	3010
STAR COM	3494,3410,3282,3252
STARSAT	3379,3395,3425,3444,3449,3253, 3265, 3302,3326,3317,3234
STMBOX	3223
STREAM	3190, 3052, 3183
STROM	3366,3052, 3138, 3183
STRONG	3056, 3002, 3024, 3025, 3135, 3180
SUNMOON	3017, 3040
SUNNY	3408,3418,3373,34443131,3323,3031, 3103,3476,3114,3116,3121,3053,3177, 3285,3363,3265,3373
SUPERMAX	3227, 3233, 3213, 3265, 3292
SUPERSON	3219
SUPERSAT	Marka arama tuşunu kullanın/use the brand search buttons
SUPEX	3086, 3219
TAKWANG	3020
TANTEC	3268
TAPLIN	3390,3059,3326,3060,3071,3208,3365, 3212,3226,3277,3278,3287,3293,3300, 3301,3324
TECHNOBOX	3371
TECHNOMATE	3173
TECHNOSAT	3405,3415,3472,3066,3147,3488,3148, 3212,3238,3267,3314,3144, 3055
TECHSTAR	3428,3397,3136, 3210, 3321, 3265. 3309.3326,3488
TECHNOLINE	3363
TEKNİKSAT	3372,3309,3365
TELEDUNYA	3378,3498,3295,3327,3264,3254,3320,3 365,3332
TELEFUNKEN	3188, 3236, 3221

Uydu Markaları (Satellite Brands)	Uydu Kodları (Satellite Code)
TELEMASTER	3024, 3025
TELETEK	3236
TELEWIRE	3197
TELKOM	3122, 3186, 3192, 3193, 3203, 3063
TELPAS	3395, 3212, 3302
TEMPO	3364, 3384, 3086, 3007, 3008, 3117, 3118, 3215
TEON	3236
TERMAL-AF	3063, 3074, 3081, 3097, 3003, 3008, 3009, 3102, 3130, 3186, 3227
TEVSAN	3364, 3326
TEVEL	3201
THOMSON	3075
TIVIBU	3402
TOCHIBO	3052, 3093, 3113
TOFILD	3165, 3184, 3186
TOKAI	3081, 3095
TOPFIELD	3069, 3165, 3185, 3184
TOSHIBA	3093, 3017
TPS	3010
TRIDENT	3427, 3474, 3053, 3480, 3219
TRIMAX	3397, 3502, 3055, 3302, 3309, 3265, 3326, 3488
TRISTAR	3302, 3326, 3309, 3292
TRONIX	3265
TWTNNER	3008
UNICELL	3145
VANTAGE	3413, 3057, 3072
VESTEL	3445, 3068, 3384, 3122, 3131, 3151, 3153, 3154, 3186, 3232, 3222, 3244, 3245, 3270, 3297
VOLTEL	3302
VORTEC	3084
VIVOX	3062
VU+DUO	3358, 3359
VU-ULTIMO	3495
WANTED	3403
WESTA	3326
WESTSTAR	3259
WISMANN	3410, 3474, 3419

**Uydu Markaları**  
(Satellite Brands)

**Uydu Kodları**  
(Satellite Code)

WIZTECH	3302 .3326. 3055
WODEX	3212, 3277,3365
WORLDSAT	3107, 3157, 3158, 3161, 3162, 3215, 3163,
WORLDSTAR	3375
WOON	3381,3265,3444
XCOM	3107
XCUISER	3148
X. DREAM	3302
X-MAX	3302
XSAT	3107
XTREME	3131,3208
YENICAG	3013.3047. 3146. 3152
YES	3181
YONSAT	3114
YUMATU	3403,3413,3437,3371.3055.3074.3386, 3097. 3027. 3031. 3227.3229,3252,3313, 3309,3459,7162
ZAHAV	3194
ZEG	3236
ZIRWATEL	3137
ZODIAC	3191,3196,3182, 3202
OTHERS	3279,3284,

**Uydu Markaları**  
(Satellite Brands)

**Uydu Kodları**  
(Satellite Code)